

Calibrating the Sensor

The sensor should be calibrated and tested whenever the vendor is placed in a new location, or when the control board or any component of the sensor system is replaced.

1. To enter the service mode, open the top access door on the inside of the main door and press the mode switch on the control board (see the decal inside the access door for the location of the mode switch, and see **8. Service Mode** for more details on Service Mode).
2. Using the # key, scroll through the menu to “**OPTIONS**”.
3. Press 5 to start the calibration. Note that it can take up to a minute to calibrate. When finished, the display will read “**OPTIONS**” once again.
4. Press the mode switch again to exit service mode.