


# Hamilton Manufacturing Corporation

1026 Hamilton Dr. Holland, OH 43528 • Phone: 419-867-4858/800-837-5561 • Fax: 419-867-4857 • www.hamiltonmfg.com

## Gold Line ACW Keypad Installation Instructions

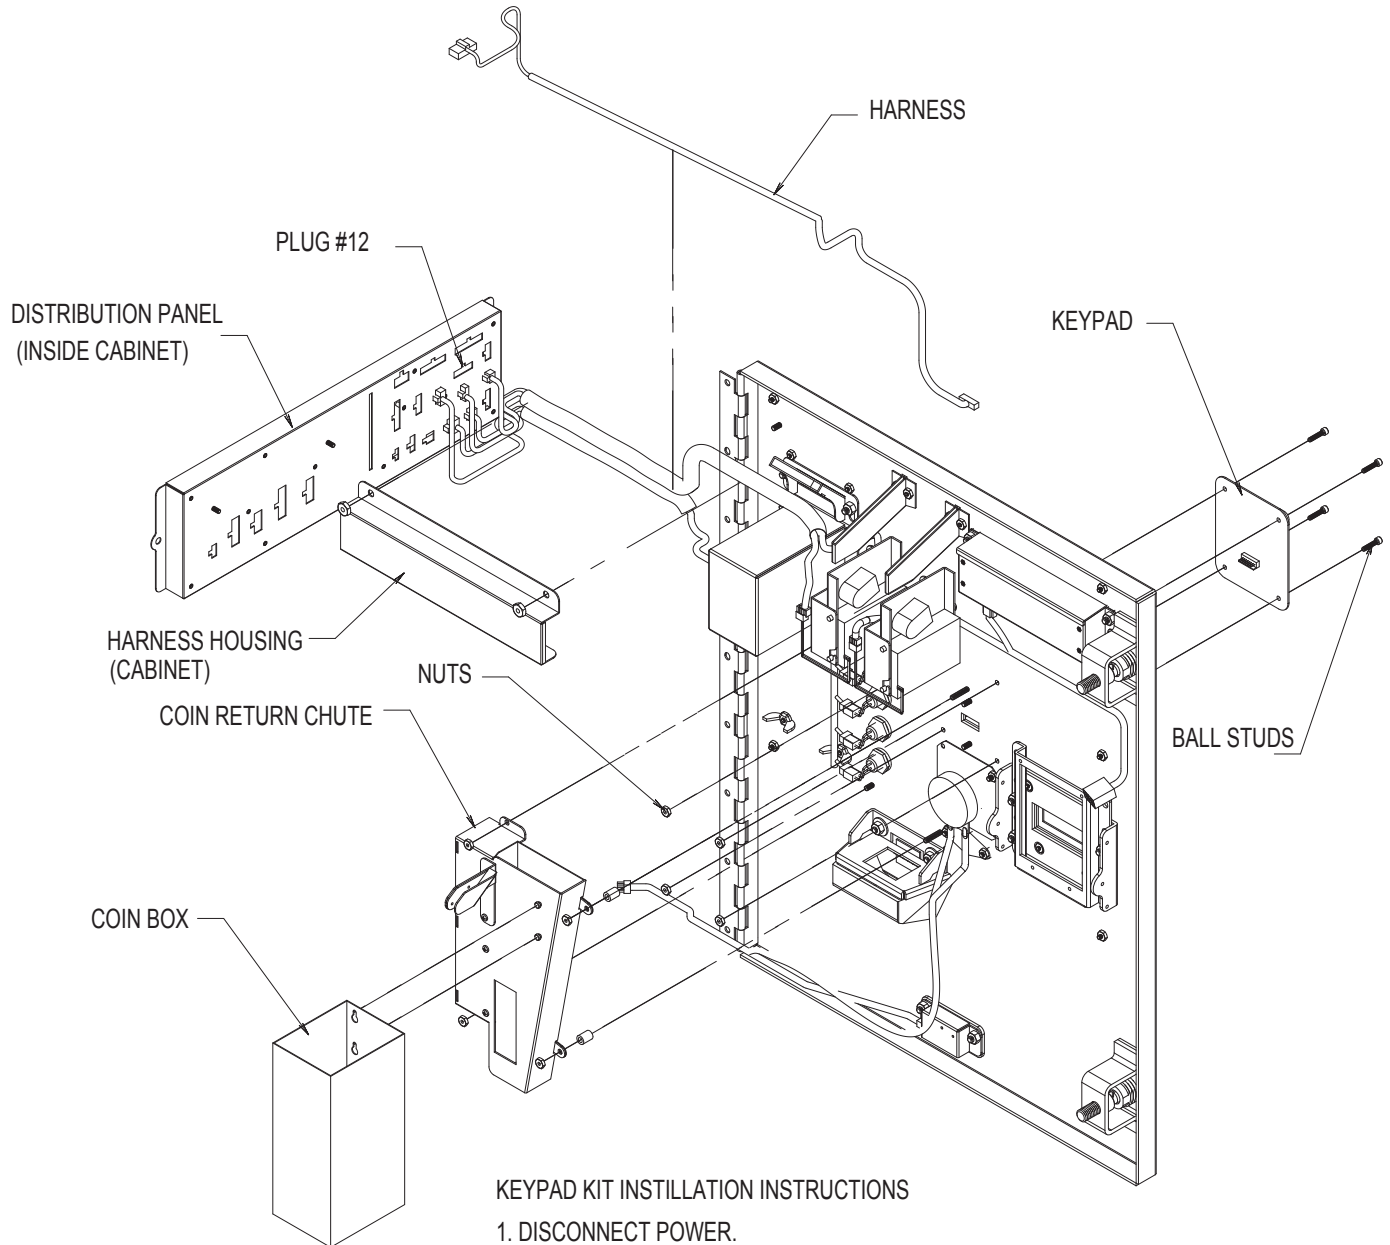

### KEYPAD KIT INSTALLATION INSTRUCTIONS

1. DISCONNECT POWER.
2. REMOVE COIN BOX.
3. REMOVE COIN RETURN CHUTE
4. REMOVE HARNESS HOUSING (CABINET).
5. ROUTE LEXAN USING EXISTING CUTOUT ON DOOR AS A TEMPLATE.
6. PLACE KEYPAD INTO CUTOUT AND SECURE WITH SUPPLIED BALL STUDS AND NUTS.
7. RUN HARNESS - CONNECT HARNESS TO PLUG #12 OF DISTRIBUTION PAN.  
STUFF HARNESS INTO EXISTING CONDUIT AND CONNECT OTHER END TO KEYPAD.
8. MOUNT COIN RETURN CHUTE OVER HARNESS.
9. MOUNT COIN BOX.
10. MOUNT HARNESS HOUSING.